

Powered by

android



# A95XMAX

## Quick Reference Guide

Please do read user manual before you operate the device.

## Safety instruction



Please keep the device in horizontal position

Please use the provided power adapter

Please keep the device away from the heat source to avoid any damage to the machine

Keep the device in a properly ventilated area

Please keep the device away from damp and dusty environment to avoid fire and electric shock

Promptly shut down the device and unplug power adapter if the machine starts emitting smoke or in case there is a burning smell coming out of the device

Please unplug the power adapter in case device is not used for longer time



Do not put any heavy stu on the top of the device

Please avoid to plug power adapter with wet hands

Please do not disassemble, modify the device by yourself to avoid any shock or damage to the device

Do not use the damaged power cable and plug

## Accessory List

The box contains the below accessories




Android box



Power Adaptor



Remote Control

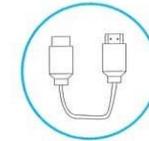

HDMI Cable




User Manual

## Hardware

 
Front Panel




Side Panel



Rear Panel

 

## Remote Control

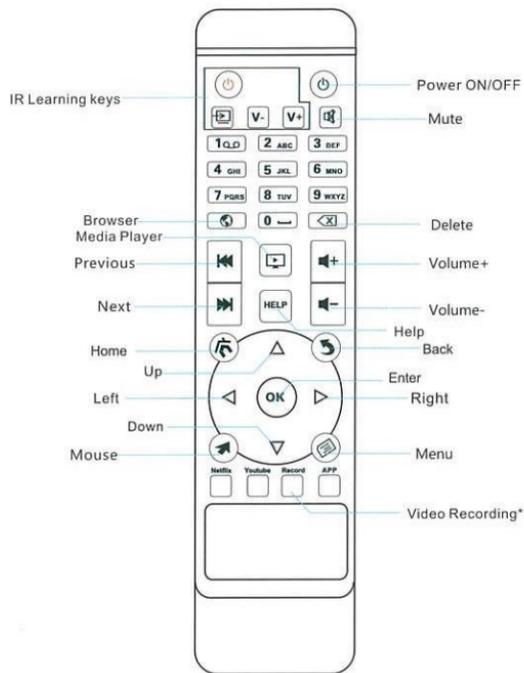

### Video Recording\*:

1. Press the "Record" key to launch the video recording App; or
2. Long press 3 seconds, then video recording starts automatically at background. Press another 3 seconds, the recording stops.

Note: Functions of the remote control may be different for different Apps. you may need to use an external mouse to operate it.

## System Connection

Please refer to below pictures and instructions to connect TV, Power, Network and other devices.

Note: Before connecting please switch o all the equipment to be connected (such as this device and TV power)

- 1** Connection with TV  
Connect HDMI/AV cable to HDMI/AV port of the Android TV box and TV set.
- 2** Connection with network  
Plug the Ethernet cable to LAN port of the Android TV box, the other side to LAN port of router or Ethernet port of home broadband network.
- 3** Connection with Power  
Connect the power adapter to the Android TV box. After power is on, it can start automatically.

Note: Before powering on, Please switch the signal input of the TV to correct source.

Tips: The Android TV box supports Wi-Fi as well. Go to settings > Network and then select the relevant SSID. Select connect, entre password to Wi-Fi.

## Technical Specifications

CPU	Quad core ARM Cortex-A53 up to 1.7GHZ(DVFS)
Android OS	Android 8.1
A/V Output	HDMI2.1,AV
Video Format	VP9 4K @60fps, H.265 10-bit 4K@60fps, H.264, MPGE, MKV, MP4 and other video formats
Audio Format	AAC, WAV, MP3 and other audio formats
Photo format	JPG, BMP, PNG and other photo formats
Network	Wi-Fi 2.4G 802.11 a/b/g/n/ac + Bluetooth RJ45 Interface 10M/100M/1000M adaptive
Operation temperature	0℃ - 40℃
Power Input	AC100-240V 50/60Hz
Power Output	DC 5V/2.5A

## Troubleshooting

Issue	Possible reason	Soultion
After turned on, no display	<ul style="list-style-type: none"><li>• The power cord is not connected or socket without electricity</li></ul>	<ul style="list-style-type: none"><li>• Connect power plug, ensure normal voltage electrical outlet</li></ul>
Tv with images without voice	<ul style="list-style-type: none"><li>• Audio cable is not connected</li><li>• Android TV box in MUTE state</li><li>• Volume is too low</li></ul>	<ul style="list-style-type: none"><li>• Re-connect the Audio cable</li><li>• Please press mute button</li><li>• Turn up the volume</li></ul>
Fail to connect the network	<ul style="list-style-type: none"><li>• Cable connect is abnormal</li><li>• Wi-Fi closed or the signal is too weak</li></ul>	<ul style="list-style-type: none"><li>• Please reconnect internet</li><li>• Please restart the Wi-Fi or adjust the position of the router</li></ul>
Controller failure	<ul style="list-style-type: none"><li>• Remote control is not in the correct direction</li><li>• Remote control is with low battery</li><li>• Remote control is broken</li></ul>	<ul style="list-style-type: none"><li>• Please aim at the front panel's 'SENSOR', then try again</li><li>• Please change the batteries</li><li>• Please send it to the local maintenance station for checking</li></ul>