

# VIP Plus Remote Control

User Manual



Thank you for purchasing this product, the guidelines below contain important information about the safe and proper use of this device. To avoid damage to you or the device, please read these instructions carefully before use:

1. Store the unit away from high temperature, extreme moisture or dust.
2. Avoid any strong blows to the product.
3. This product is a high precision electronic product, don't disassemble it/clean with alcohol, thinners or benzene.
4. The manufacturer reserves the right to upgrade the product, product specification and design is subject to change without prior notice.
5. Disclaimer: The manufacturer assumes no responsibility for data loss.
6. The unit is not water-proof.
7. Pictures contained in this manual are for reference only.

## The VIP Plus remote control

To use the VIP Plus remote control, charge the remote control using the USB lead provided. Once the red LED on the left stops flashing, it has completed charging. Now insert the USB dongle into your DroidBOX (or whichever device you want to use the VIP Plus with).

You should now find that you can control your device from the remote control. If an on screen cursor doesn't appear, try pressing one of the direction keys around the OK button. If that doesn't help or you want to turn off/on the Air Mouse function (where moving the remote control around in front of you will move the onscreen cursor), press the button with a cursor and power icon on it, middle button at the bottom. To re-enable it, press the button once again.

On a related note, when you flip the remote control over to access the QWERTY keyboard, the Air Mouse function is automatically turned off until you turn the remote back over again.



 
 
 


 




 

On our DroidBOX devices the installation should be immediate, on some hardware/operating systems you'll need an internet connection and for the drivers to be automatically downloaded by the host system.

 


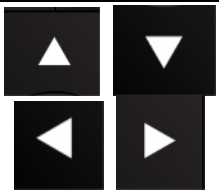



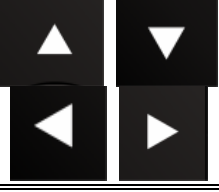

Should you find you can't control your device yet, try pairing the USB dongle and remote control. Hold down the OK and Home buttons on the front of the remote control. Make sure the device with the USB dongle is already turned on, or at least supplying power to the USB socket!

If you want to change the sensitivity of the Air Mouse, please bring up the list of installed Android apps, and select Settings. If you see a monochrome like background, and a long list on the left, click "Language and Input". Scroll the right hand section of the screen until you see Pointer Speed. Click on it, and select your desired speed and click OK. If your Settings screen is colourful, select the last tab on the right and then click the More Settings button. Should your Settings screen be monochrome with a network of tiles, please click the More Settings tile (normally second row down) option, then the Language & input entry.

The remote control's red standby button at the bottom can be taught to mimic an infrared remote control function. You could train the VIP Plus remote to use it as a Standby button for your DroidBOX, or change the Source selection on your TV. To teach the VIP Plus remote a command, line up the top of the two remotes on a stable surface. To achieve this, hold down both the Home and the red programmable power button together (see the table for button assignments). Both LEDs will flash for a moment, once they stop, press (once) the button on the other remote that you want to teach the VIP Plus remote to mimic. You may need to repeat this a couple of times until both LEDs flash again to confirm success.

## Icons and their meanings

Key	Function
	Red LED On: Charging battery (goes out once complete) Blue LED Flashes: Key pressed
	Home button, within Android takes you to your launcher's homescreen
	Menu button for Android devices
	Return (go back one step normally)
	Cursor keys (Up, Down, Left and Right)
	OK button, functions as a screen tap when using the Air Mouse mode
	Volume down and up
	Android's Recent Apps (currently functional with T8/T8-S/T8-S Plus(planned))
	Mutes the volume
	Programmable power/standby button
	Air Mouse off/on toggle
	Fixed function (will reboot or turn off some devices)
	Cursor keys again, for navigation when using flipside of VIP Plus for keyboard function
	Esc(ape) button, often similar to Return/Right button click when used in Android

	Caps (Lock) button. Turn on for all characters to be in CAPITALS
	Function key toggle – modifies the behavior of keyboard buttons with green ink on them
	Standard alphanumeric buttons. Use without modifying keys to have the character entered
	Control button
	Shift button - hold down to make individual characters CAPITAL
	Page up and Page down (scrolling)
	Backspace, sometimes called a Delete key. Removes one character to the left of the cursor
	Enter (sometimes also referred to as a Return key by computer users)
	For games that allow buttons to be assigned, these are A and B fire buttons

## Specifications

Frequency:	2.4GHz
Sensors:	3 Gyros and 3 G-sensors
Keys:	59
Range:	Up to 10 Metres
Power consumption:	<10mA in use, negligible during Standby mode
Dimensions:	151x50x14mm
Weight:	~80g

## Support Resources

How To site for DroidBOX Products: <https://DroidBOX.co.uk/how-to/>

YouTube: <http://www.youtube.com/DroidboxInUK/videos> Forum: <https://DroidBOXForums.com>  
e-mail: [support@DroidBOX.co.uk](mailto:support@DroidBOX.co.uk) Main site: <https://DroidBOX.co.uk>